



Joins 1/4" material to lesser gauge. 1-1/8" wide; 1/4" leg. Uses 970, 980 or 990 track only.

<b>BURKE</b>		<b>Futura</b>	
940-701	Black	940-660	Rocky
940-502	Brown	940-206	Lt.Beige
		<b>VT705</b>	




Snap-in T moulding. Joins 1/4" or 5/16" material on each side. Uses 970, 980 or 990 track only.

<b>BURKE</b>		<b>Futura</b>	
930-701	Black	930-660	Rocky
930-502	Brown	930-206	Lt.Beige
		<b>VT703</b>	




Snap-in T moulding. Joins 1/4" or 5/16" material on each side. Uses 970, 980 or 990 track only.

<b>BURKE</b>		<b>Futura</b>	
935-701	Black	935-660	Rocky
935-502	Brown	935-206	Lt.Beige




Adds height up to 5/8" on Snap-in T moulding for ceramic, wood, and laminates. Use with 970 Track for 360, 365, 930, 935 and 940 T's.

<b>BURKE</b>		<b>Futura</b>	
975-401	White		

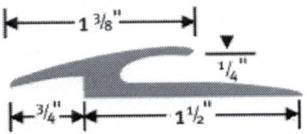


Transitions 1/4" or 5/16" glue-down carpet to 1/16" to 1/8" resilient.

<b>BURKE</b>		<b>Futura</b>	
152-701	Black	152-660	Rocky
152-502	Brown	152-206	Lt.Beige
		<b>VT754</b>	

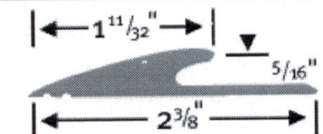


Transitions 5/16" glue-down carpet to 1/8" resilient.

<b>BURKE</b>		<b>Futura</b>	
700-701	Black	700-660	Rocky
700-502	Brown	700-206	Lt.Beige
		<b>VT332</b>	




Binder bar edging for 1/16" to 1/8" resilient floors. With dry back.

<b>BURKE</b>		<b>Futura</b>	
735-701	Black	735-660	Rocky
735-502	Brown	735-206	Lt.Beige
		<b>VT326</b>	




Butts to reduce gauge of resilient to 0". 1" x 36" x 1/16"

<b>BURKE</b>		<b>Futura</b>	
630-701	Black	630-660	Rocky
630-502	Brown	630-206	Lt.Beige
		<b>VT323</b>	




Butts to reduce gauge of resilient to 0". 1" x 36" x 3/32"

<b>BURKE</b>		<b>Futura</b>	
632-701	Black	632-660	Rocky
632-502	Brown	632-206	Lt.Beige
		<b>VT703</b>	




Butts to reduce gauge of resilient to 0". 1" x 36" x 1/8"

<b>BURKE</b>		<b>Futura</b>	
633-701	Black	633-660	Rocky
633-502	Brown	633-206	Lt.Beige
		<b>VT325</b>	

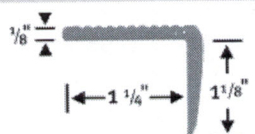


Covers leading edge of step. May be used over vinyl and sheet goods.

<b>BURKE</b>		<b>Futura</b>	
510-701	Black	510-660	Rocky
510-502	Brown	510-206	Lt.Beige
		<b>VT642</b>	

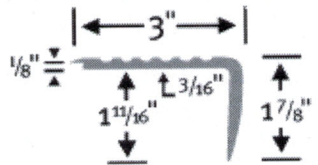

Nosing with deep grooves and overlap lip. Accepts material to 1/8".

<b>BURKE</b>		<b>Futura</b>	
575-701	Black	575-660	Rocky
575-502	Brown	575-206	Lt.Beige
		<b>VT644</b>	

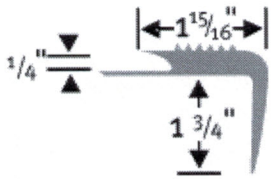


Friction-Grip nosing for use when only step is covered. Undercut for 1/4" and 5/16" carpet.

**BURKE**

570-701	Black	570-660 Rocky
570-502	Brown	570-206 Lt.Beige

**Futura**  
**VT640**

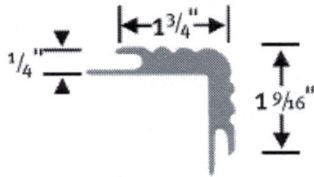


For 1/4" and 5/16" carpet. Accommodates step and riser; with ribbed surface.

**BURKE**

565-701	Black
---------	-------

**Futura**

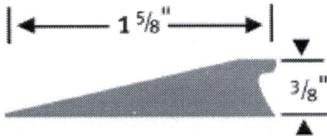


Reduces 3/8" materials to 0". 1-5/8" transition.

**BURKE**

146-701	Black
---------	-------

**Futura**

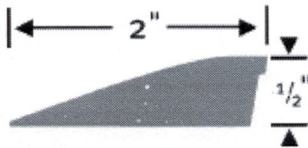


Edge reducer for 1/2" materials. 2" transition.

**BURKE**

160-701	Black
---------	-------

**Futura**

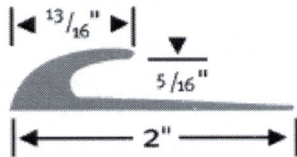


Bevel-edge reducer. For 5/16" carpet; deep undercut.

**BURKE**

400-701	Black	400-660 Rocky
400-502	Brown	400-206 Lt.Beige

**Futura**


**SUBFLOOR TRANSITIONS**



Reduces to 1/4" to 0". Can be cut at score line to reduce height as indicated.

**BURKE**


190-701	Black
---------	-------



Reduces to 3/8" to 0". Can be cut at score line to reduce height as indicated.

**BURKE**

191-701	Black
---------	-------



Reduces to 1/2" to 0". Can be cut at score line to reduce height as indicated.

**BURKE**

192-701	Black
---------	-------